

### SmartKey Loading Instructions

1. Write down all PID settings, set points, etc. that you wish to retain. These are field-set items and will not be retained after the SmartKey has been loaded. If you do not write these values down they cannot be recovered.
2. Shut down power to the unit at the disconnect.
3. Unplug telephone cable connection for display at the microprocessor. Plug SmartKey into this port.
4. Power unit back up. SmartKey will flash.
5. SmartKey is ready to load when Start button is lit.
  - a. Arrow must be pointing towards the telephone cable must be lit to load the program.
  - b. If the arrow pointing towards the start key is lit, press and hold the mode button to change SmartKey to loading operation (arrow pointed towards telephone cable).
6. Press the Start button.
7. SmartKey will flash while loading. When loading is complete, flashing will cease and the SmartKey will enunciate a short alarm.
8. Shut down power to the unit at the disconnect. Unplug SmartKey and plug display cable back in to the microprocessor.
9. Power unit back up. Cycle power, if required, as indicated on the unit's display.